

Charcoal grill TOP MASTER 120 x 70



Product Code: 1024
Availability: 3 - 7 days

Price: 1159.00€

Ex Tax: 950.00€



Description

Vrhunski profesionalni žar na oglje TOP MASTER 120 x 70 cm!

Žar med drugim uporablja tudi MASTERCHEF SLOVENIJE 2016 Darko Klemen!

- Dimenzije:
- širina: 120 cm
- globina: 70 cm
- višina: 90 cm
- MOŽNOST IZDELAVE PO NAROČILU

OPIS:

Žar profesionalne izvedbe, izredno masivne izdelave (cca 150 kg), vsebuje 2 deljeni mreži, izdelani iz kvadratnih polnih palic 8 x 8 mm ali mreži iz svetlo vlečenega jekla fi 6 mm (po izbiri). Spodaj se nahaja polica za odlaganje in shranjevanje. Žar je z vseh strani zaprt s pločevino, na prednji strani pa so dvokrilna vratca. Zaradi možnosti vstavljanja pregrade na sredini kurišča, se lahko uporablja le 1/2 žara ali pa se kuri cel žar, na primer z različno kurjavo in posledično žar nudi več možnosti peke različne hrane pri različnih temperaturah ali pa pregrado enostavno odstranite ter uporabljate celo kurišče. Zraven vsa pripadajoča oprema, držala za dvig mrež, grebljica, snemljiva pregrada.

Cena: 700,00 EUR

V ceni je vključen celoten žar na oglje, s pripadajočo opremo in enim parom mrež po izbiri.

Opcijsko;

- dodatni par mrež (mreži iz svetlo vlečenega jekla fi 6 mm ali mreži iz kvadratnih palic 8 x 8 mm); 150,00 EUR
- dno oblečeno s šamotno opeko; 100,00 EUR

Navedene cene ne vsebujejo DDV!

Instructions for use of charcoal grills and grilling grids FIRST USE AND LIGHTING INSTRUCTIONS

The first use of the grill should be gradual – use less than usual. For preparing the embers, we recommend the following procedure: Take the charcoal from the bag by hand and place it at the bottom of the grill. Do not pour it directly from the bag into the grill, as you will also pour in dust, which will cause problems later. In the grill, break the charcoal into pieces of the appropriate size with a rake (for example, about 5 cm), then stack it in a pile. Light one spot at the top of the pile. You can do this with a gas torch, grill lighter, or a minimal amount of kindling (such as spruce twigs). The goal is to ignite only one spot and then let the charcoal ignite itself. The charcoal is ready when it is fully ignited (even the interior of the pile). Then spread the charcoal across the bottom of the grill.

The amount of charcoal should be moderate – enough to cover the bottom but still sufficient so that there is no space (air) between the coals. The charcoal must touch each other, otherwise, it may extinguish. The quality of the charcoal is also important. Ensure that the charcoal is properly stored (in as little moisture as possible).

For more advanced users and longer grilling, we recommend lighting a slightly larger amount of charcoal in a pile and then spreading it across the fire pit. Press it down with a rake to remove the air, and if necessary, cover it with a thin layer of ash left from previous grilling sessions. This will neutralize the initially very high temperature, and the charcoal will last significantly longer. Then, when necessary (when

the temperature starts to drop), lightly scrape off the ash from the surface of the charcoal or gently poke it with a rake to allow the charcoal to get air again. This method requires a bit more experience, but it is very useful as, with the right amount of charcoal, you can achieve all-day grilling without adding more charcoal. Of course, the charcoal must be of good quality.

Charcoal grills are coated with high-temperature-resistant paint, which needs around 250°C to cure. In practice, this means that the paint may emit a smell during the first use, after which it cures and does not smell anymore. Any odor during the first use does not affect the food. Maintenance and cleaning instructions for grilling grids or grill plates

Before the first use, clean the grid or plate with paper towels and cooking oil. Then, during the preparation of the embers, place the grid or plate on the grill to heat up. Immediately before placing food on the heated grid or plate, grease it well with cooking oil again.

After grilling, while the grid or plate is still warm, clean and grease it with cooking oil. Cleaning the grid or plate is easiest with a grill mesh or grill brush, onto which you can drizzle some cooking oil. This helps remove food particles, and the oil coating better protects the grid or plate from corrosion. Finally, you can further clean it with paper towels soaked in cooking oil.

For each subsequent use, the procedure is the same; always grease the grid or plate with cooking oil directly before grilling.

STORAGE OF CHARCOAL GRILLS, GRIDS, AND PLATES

Do not leave grills, bright-drawn steel grids, or plates exposed to the elements (rain, snow, humidity). It is also not recommended to store them in closed damp areas or wrap them in foil.

If the instructions are followed, rust will not occur.

Product Gallery



 **IKI-PRO**
SLOVENSKI PROIZVAJALEC



 **IKI-PRO**
SLOVENSKI PROIZVAJALEC



 **IKI-PRO**
SLOVENSKI PROIZVAJALEC



 **IKI-PRO**
SLOVENSKI PROIZVAJALEC



 **IKI-PRO**
SLOVENSKI PROIZVAJALEC



IKI-PRO
SLOVENSKI PROIZVAJALEC



IKI-PRO
SLOVENSKI PROIZVAJALEC



IKI-PRO
SLOVENSKI PROIZVAJALEC



IKI-PRO
SLOVENSKI PROIZVAJALEC



IKI-PRO
SLOVENSKI PROIZVAJALEC

